



# INTERNAL CORNER

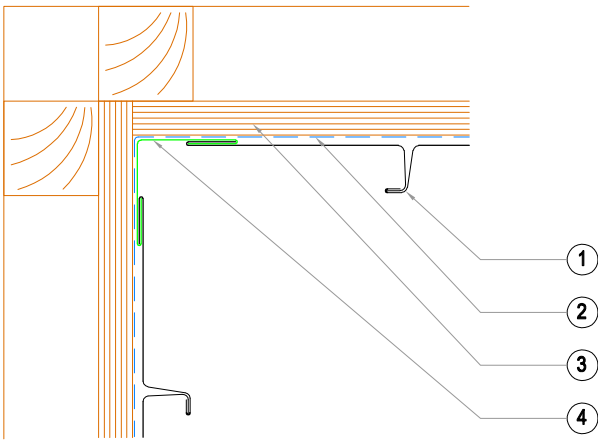

1. GreenCoat PLX Pro BT Vertical Angle Seam.
2. Breather Membrane.
3. 18mm WBP plywood.
4. Internal corner flashing.

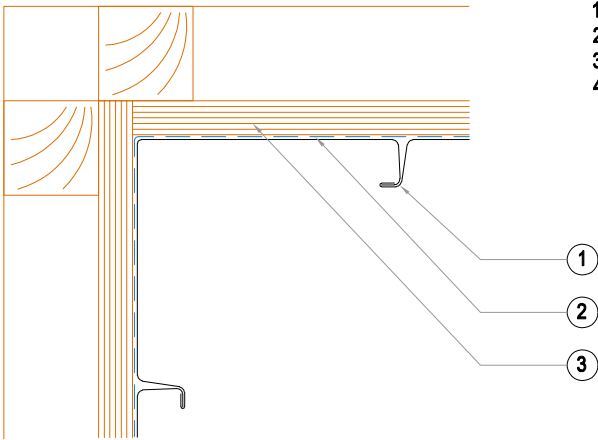

1. GreenCoat PLX Pro BT Horizontal Angle Seam.
2. Breather Membrane.
3. 18mm WBP plywood.
4. Internal corner flashing.

