

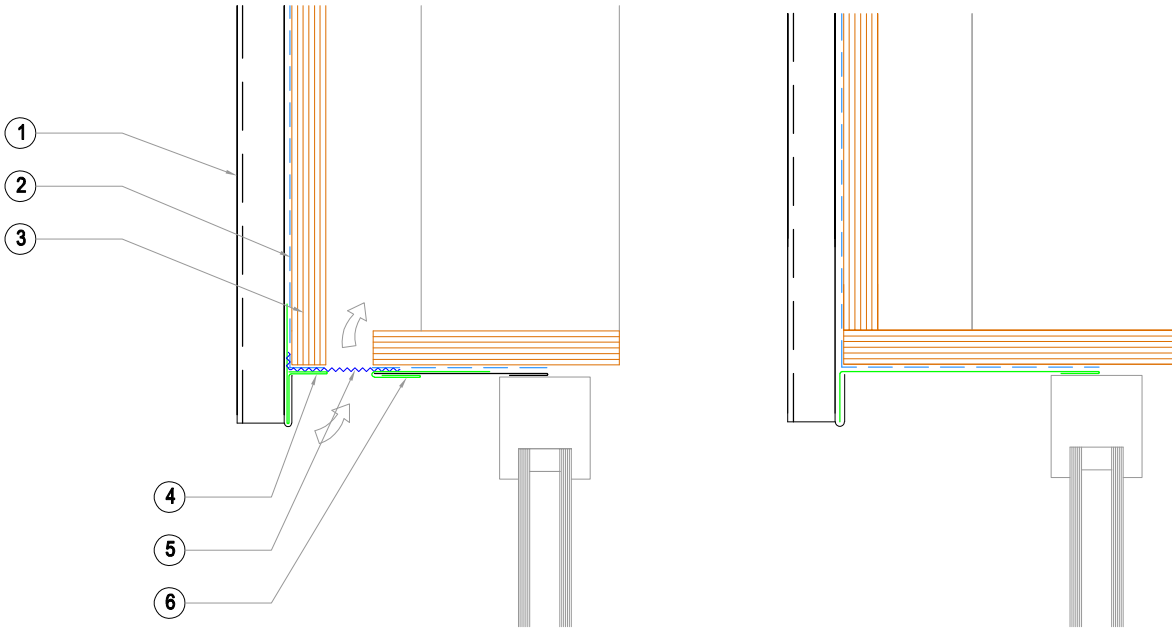


WINDOW VERTICAL SEAM 1

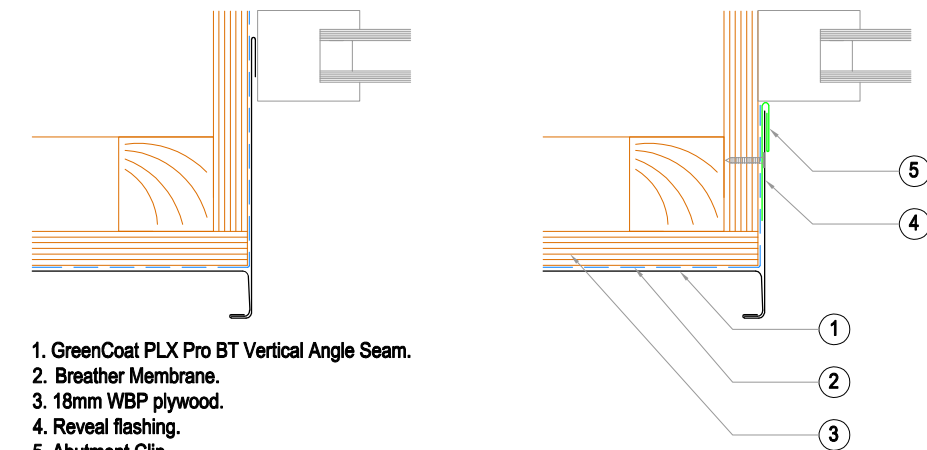

1. GreenCoat PLX Pro BT Vertical Angle Seam.
2. Breather Membrane.
3. 18mm WBP plywood.
4. Base flashing.
5. Insect mesh.
6. Abutment clip.
7. Cill flashing.
8. Flashing liner.

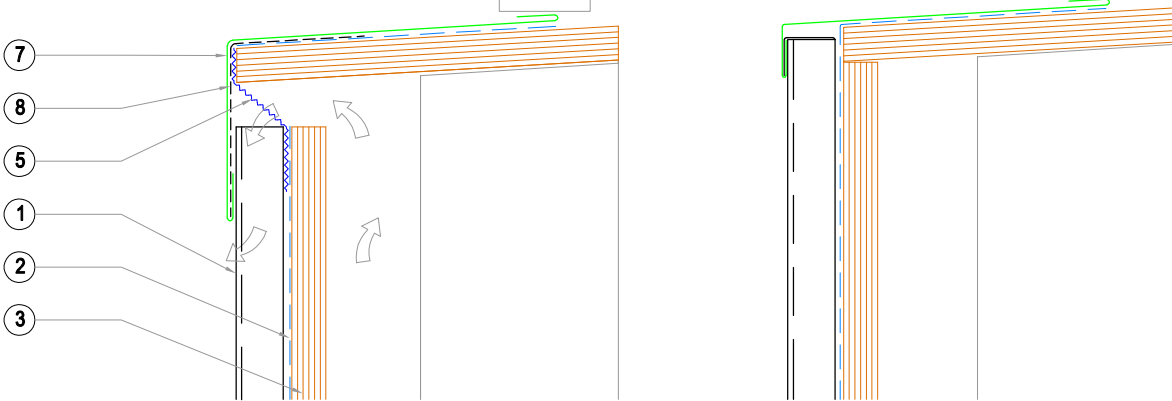

1. GreenCoat PLX Pro BT Vertical Angle Seam.
2. Breather Membrane.
3. 18mm WBP plywood.
4. Reveal flashing.
5. Abutment Clip.