

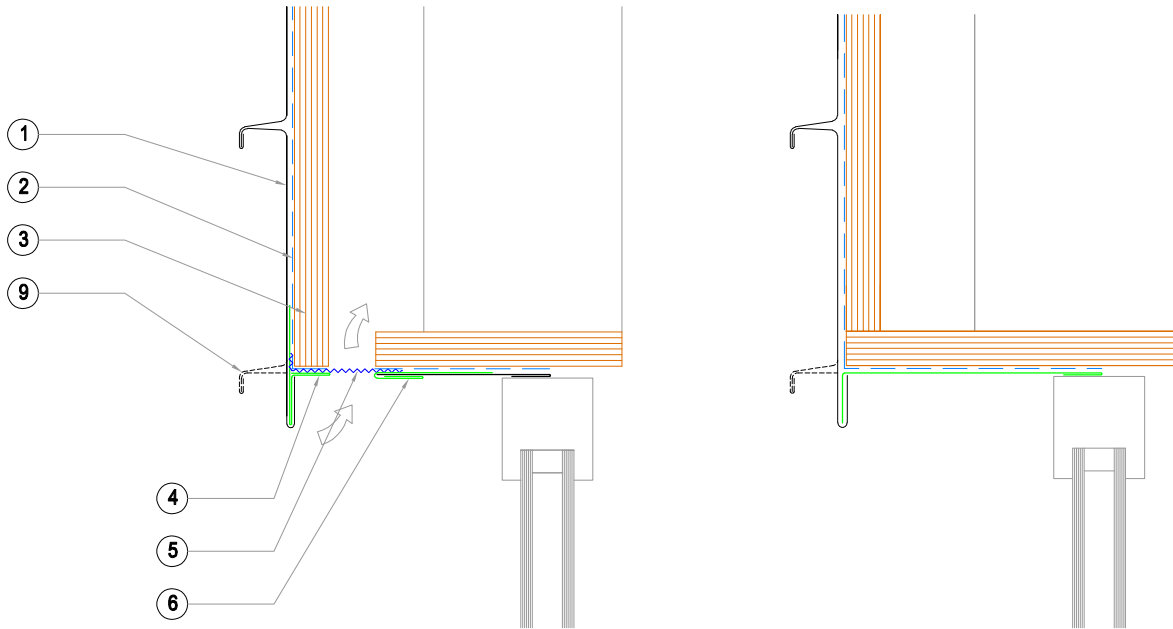


WINDOW HORIZONTAL SEAM

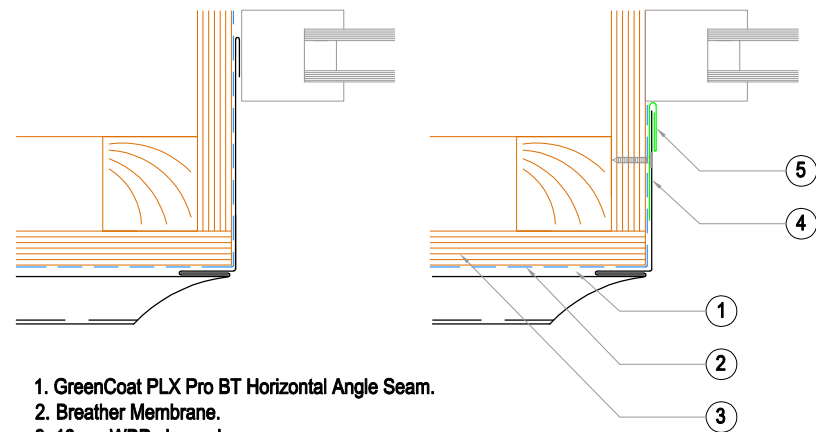

1. GreenCoat PLX Pro BT Horizontal Angle Seam.
2. Breather Membrane.
3. 18mm WBP plywood.
4. Base flashing.
5. Insect mesh.
6. Abutment clip.
7. Cill flashing.
8. Flashing liner.
9. Optional seam position according to setting out

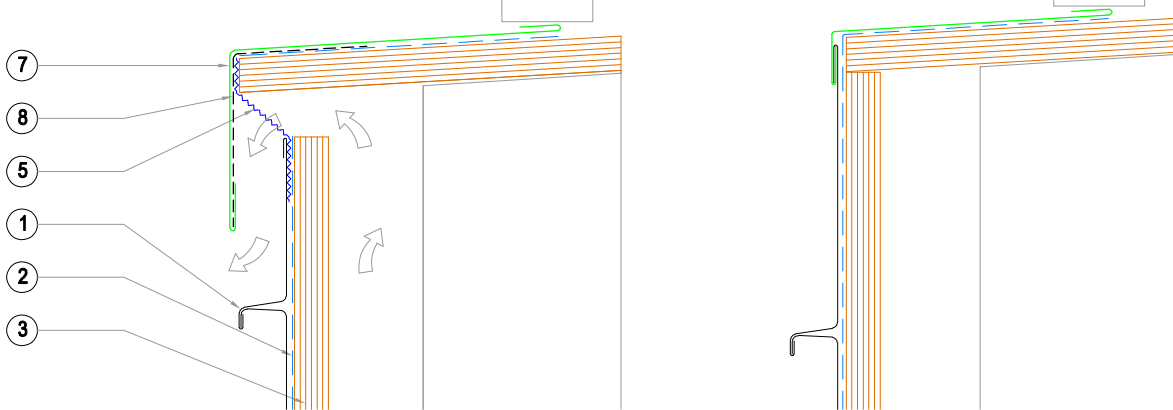

1. GreenCoat PLX Pro BT Horizontal Angle Seam.
2. Breather Membrane.
3. 18mm WBP plywood.
4. Reveal flashing.
5. Abutment Clip.