




SIDE ABUTMENT

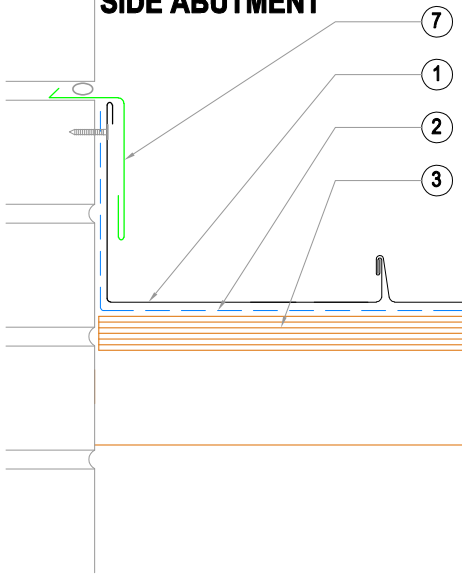

VERGE 1

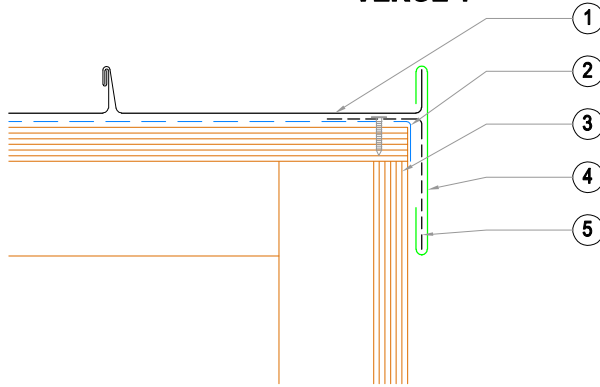

VERGE 2

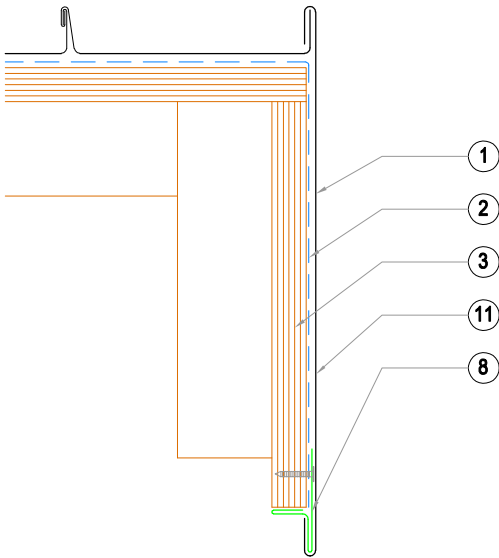

1. GreenCoat PLX Pro BT.
2. Breather Membrane.
3. 18mm WBP plywood.
4. Verge Flashing lapped and sealed end to end.
5. Flashing liner.
6. Insect mesh.
7. Chase flashing.
8. Drip flashing.
9. Single lock soffit.
10. Abutment flashing.
11. Single lock fascia.

VERGE 3

