


Single Ply Membrane Details

Fully adhered system

Parapet detail with handrail

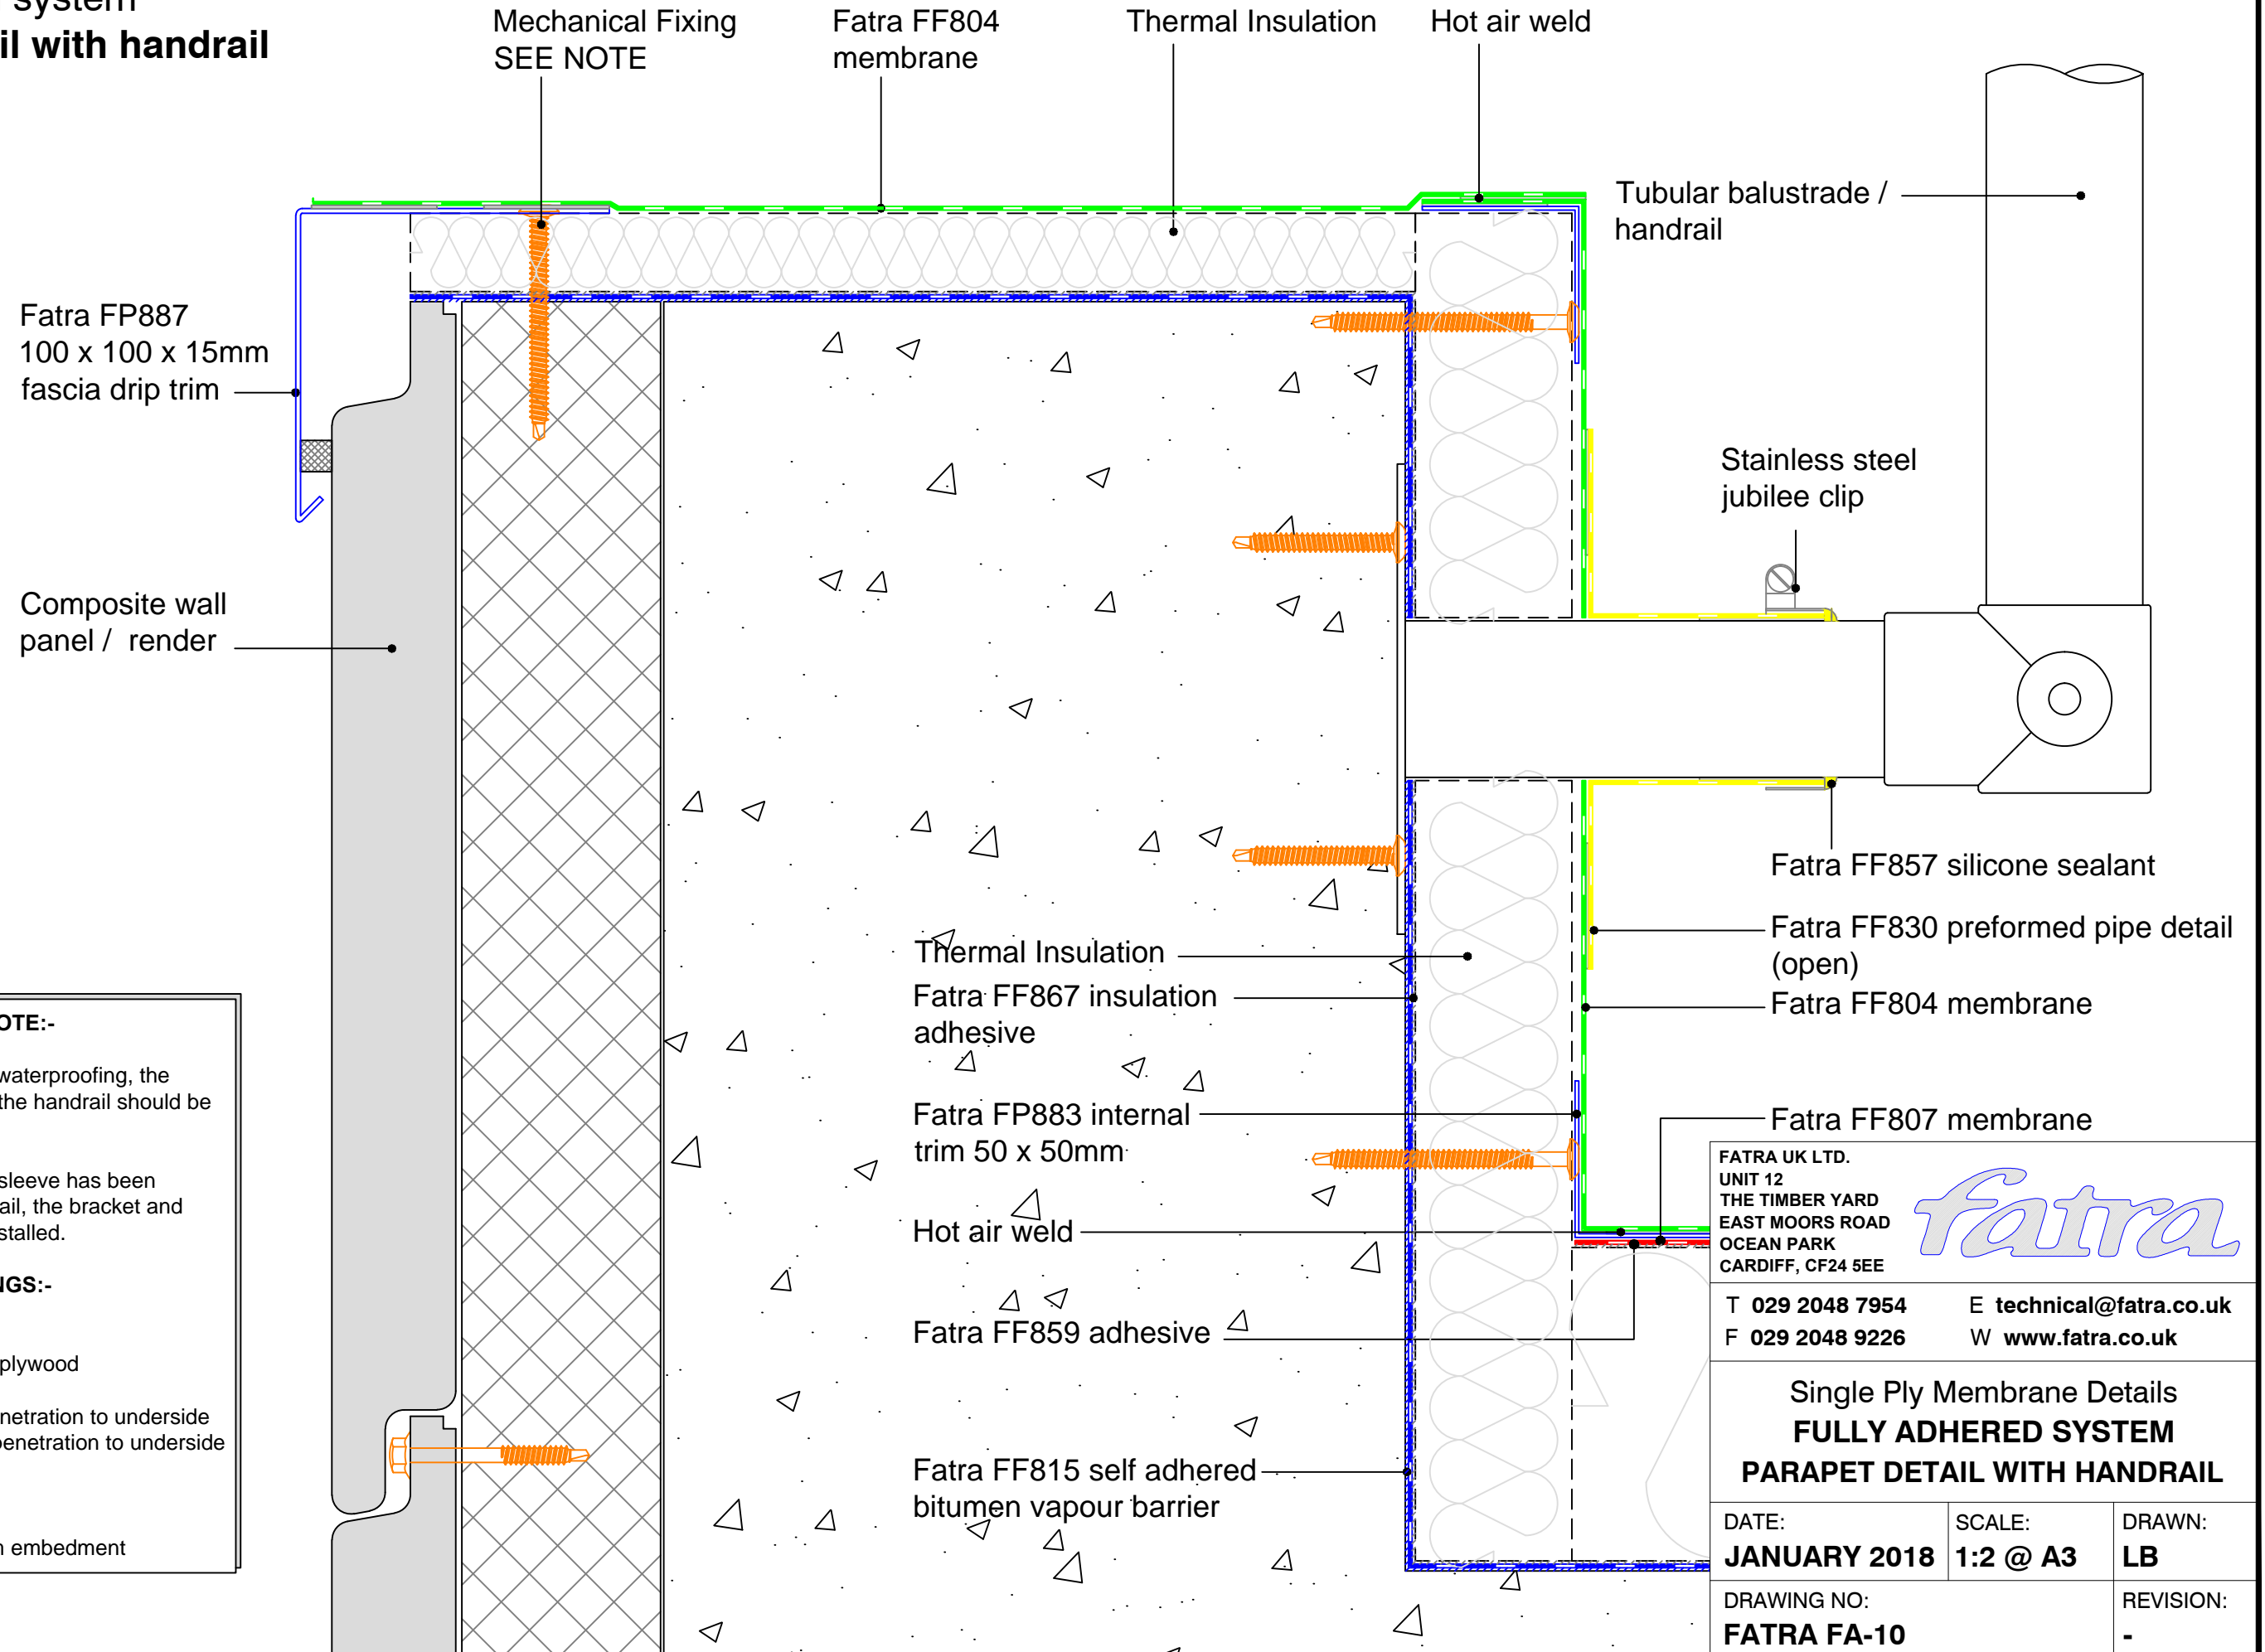

CONSTRUCTION NOTE:-

To ensure effective waterproofing, the horizontal section of the handrail should be installed first.

After the membrane sleeve has been dressed around the rail, the bracket and vertical rail can be installed.


MECHANICAL FIXINGS:-

Selection of fixings:-

Deck - Metal/Timber/plywood
 FBS-5.8 fasteners
 Metal deck 15mm penetration to underside
 Timber deck 12mm penetration to underside

Deck - Concrete
 FHD-6.1 fasteners
 Concrete deck 25mm embedment

FATRA UK LTD.
 UNIT 12
 THE TIMBER YARD
 EAST MOORS ROAD
 OCEAN PARK
 CARDIFF, CF24 5EE

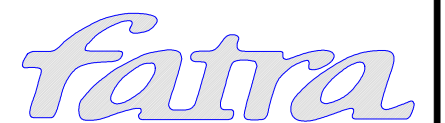

T 029 2048 7954 E technical@fatra.co.uk
 F 029 2048 9226 W www.fatra.co.uk

Single Ply Membrane Details
FULLY ADHERED SYSTEM
PARAPET DETAIL WITH HANDRAIL

DATE: JANUARY 2018	SCALE: 1:2 @ A3	DRAWN: LB
------------------------------	---------------------------	---------------------

DRAWING NO: FATRA FA-10	REVISION: -
-----------------------------------	----------------