CAPPING

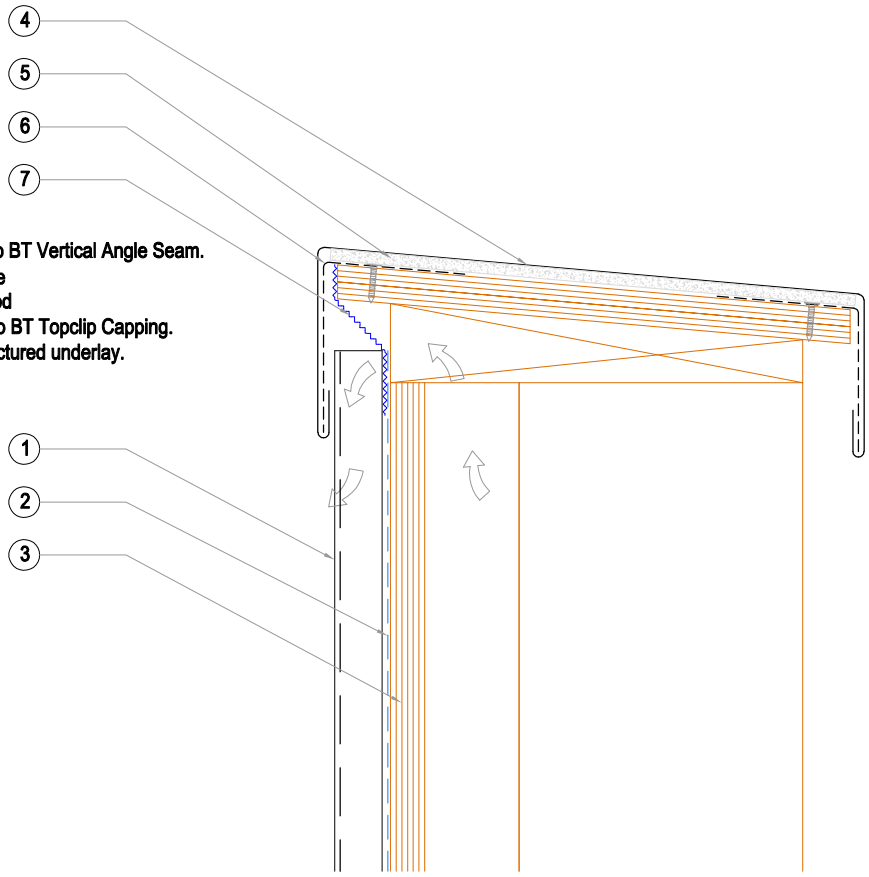

1. GreenCoat PLX Pro BT Vertical Angle Seam.
2. Breather Membrane
3. 18mm WBP plywood
4. GreenCoat PLX Pro BT Topclip Capping.
5. ISO-Mat Metal structured underlay.
6. Capping liner.
7. Insect mesh.

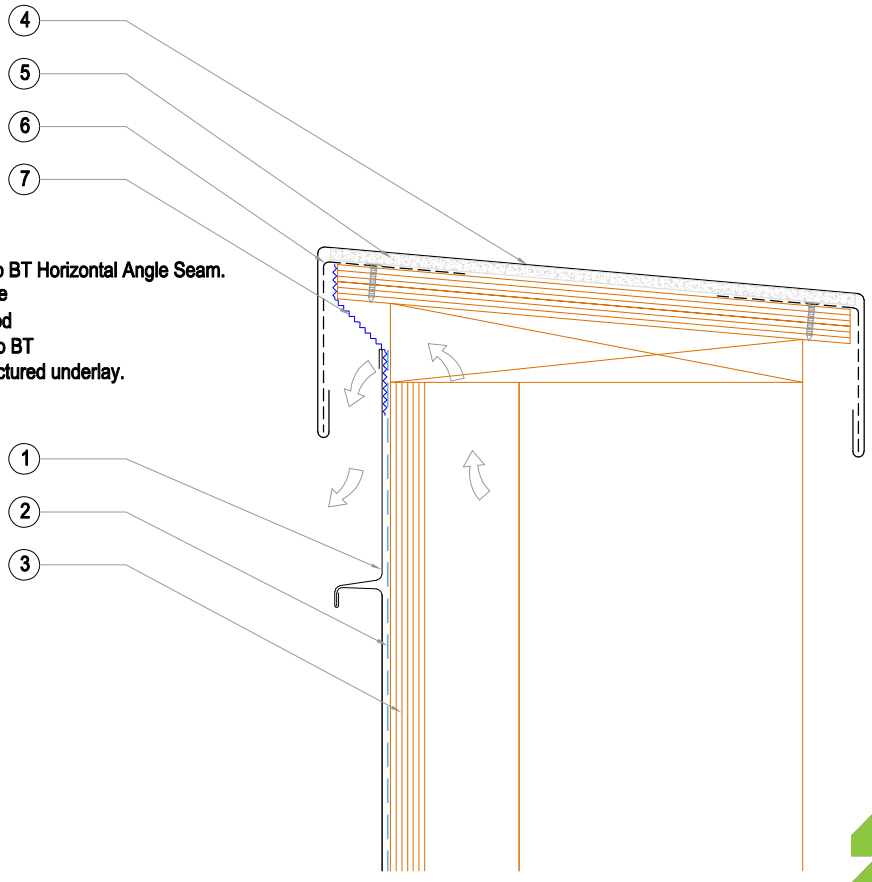

1. GreenCoat PLX Pro BT Horizontal Angle Seam.
2. Breather Membrane
3. 18mm WBP plywood
4. GreenCoat PLX Pro BT
5. ISO-Mat Metal structured underlay.
6. Capping liner.
7. Insect mesh.

Tecron